


- You can import data in the text (*.txt) format to your Modelbuilder model
- This data represent polygons in tabular text format. In this way you can also enter heterogeneities templates, uneven surface & horizons etc.

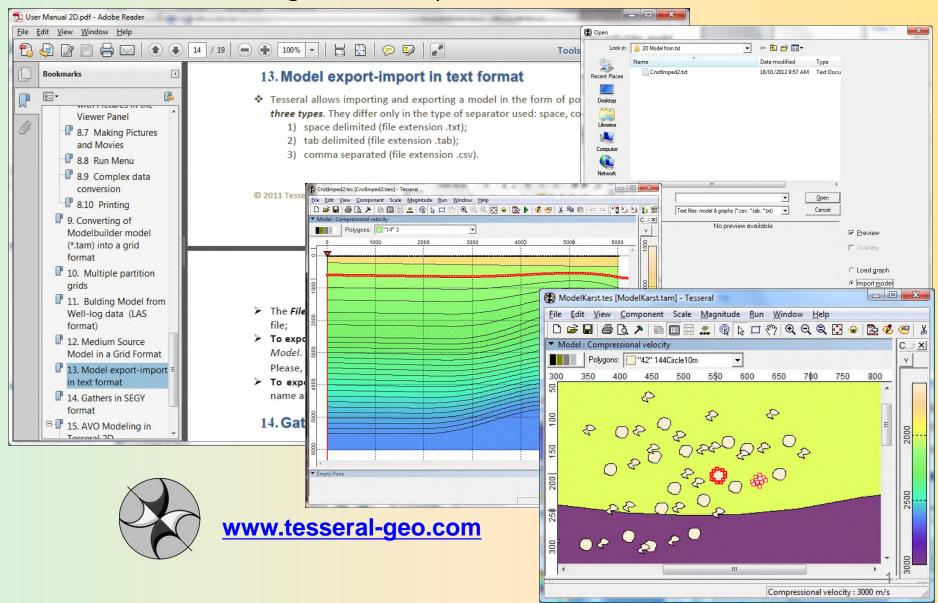


You can import data in the text (*.txt) format by converting it to the model grid (*.tgr)


 This data represent grid of particular property (Vp, Vs or Density) in a text format.

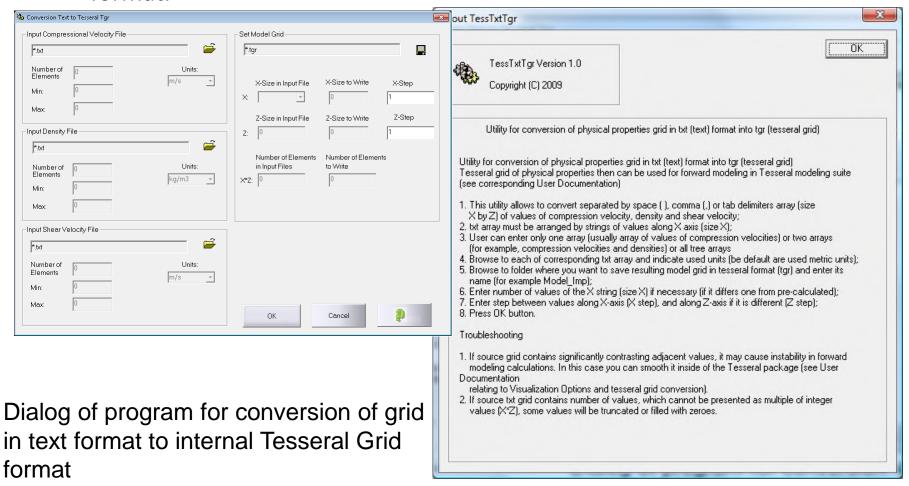

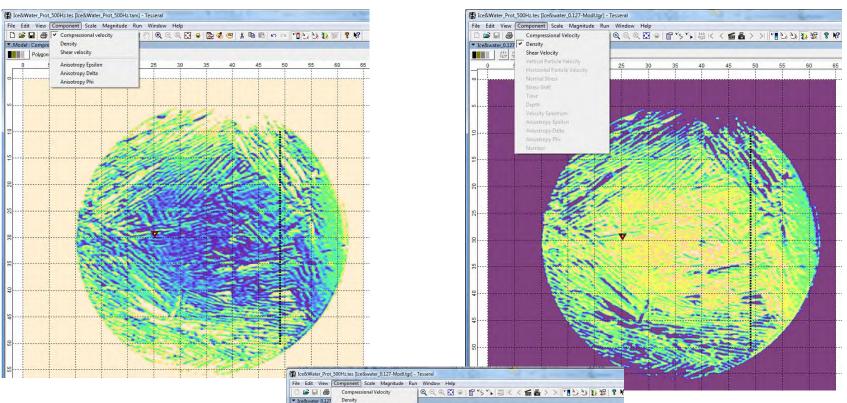

Converted grid in internal Tesseral Grid format Ice&water_0.125.tgr Scaled x1000: 1mm = 1m; 1Hz=1KHz, 1msec=1mcsec

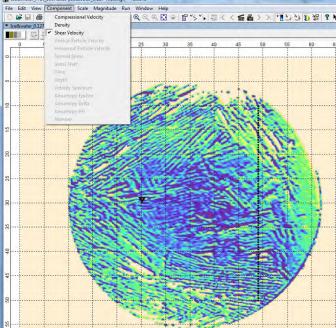

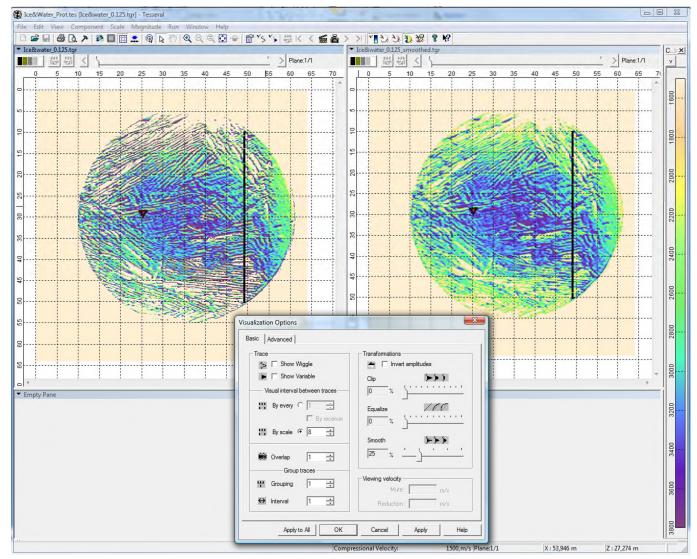

Tesseral GridIce&water_0.125.tgr was too rough and caused computations instability. It was smoothed (converted for each of properties into separate smoothed grid (File->Convert to-> Complex) and then imported (File->Import Grid Model) Ice&water_0.125_smoothed.tgr.

